


Twyford

Product Name: Toilet Wall Hung Bracket
Brand: Twyford
Model: SR8138XX
Category: Fittings
Technologies: Suitable for Water Closet(WC)適用於連體式座廁

Toilet Wall Hung Bracket



Installation diagram

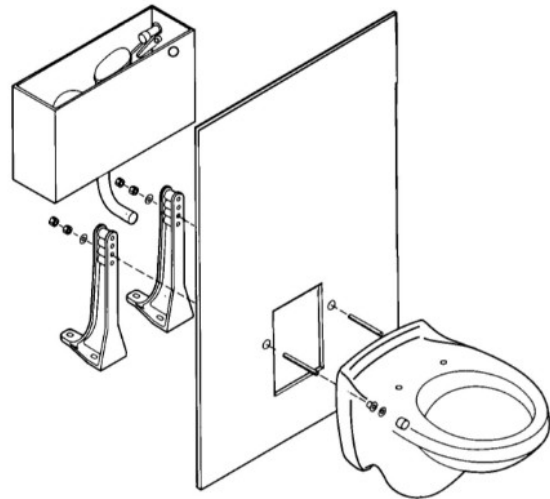



Purpose of hanging up toilet




FIXING INSTRUCTIONS
WALL HUNG BIDET

***Prior to installation, please establish the correct dimension for your particular WC / Bidet**


Dimension - B 180mm *or 230mm

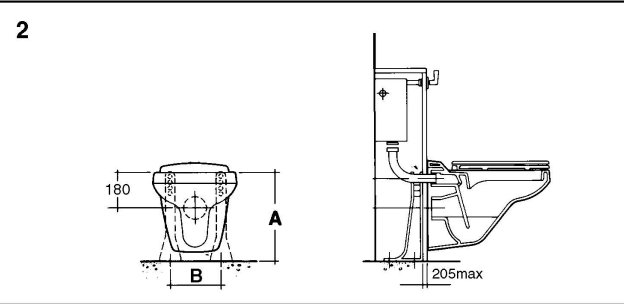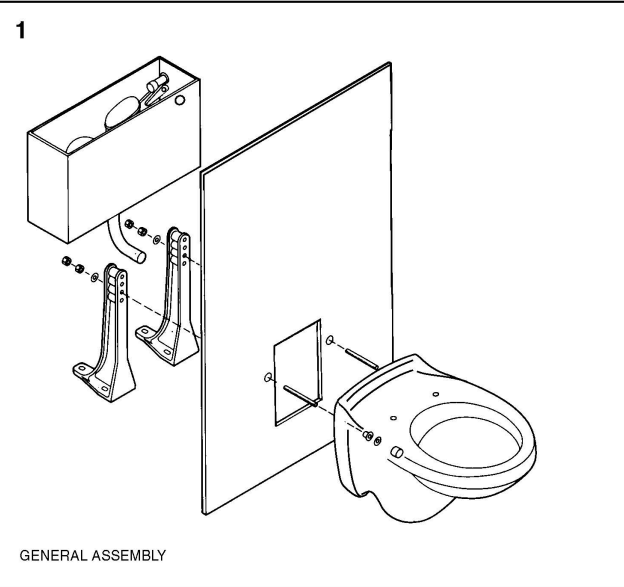


Normal height of w.c. basin (dimension A) is 400mm. Design of floor brackets also allows heights of 375mm, 425mm or 450mm.
Before fixing, ensure soil pipe installation will accommodate the height chosen.
Note *Floor brackets may only be fixed to a solid floor.
*Access to cistern must be built into design of panels.

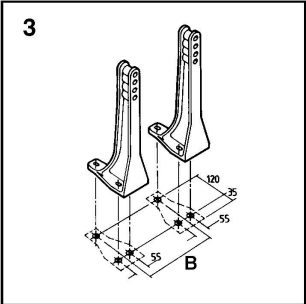


Drill holes for floor brackets as shown. Secure brackets to floor using M12 rawlbolts (not supplied).

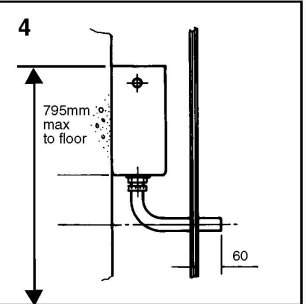


Fix cistern at maximum height shown above. Install cistern as per the instructions provided with the cistern.

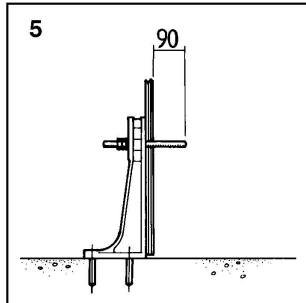


Assemble nuts and washers onto studding so that studding protrudes 90mm from front of panel. Nuts should then be locked tightly together.

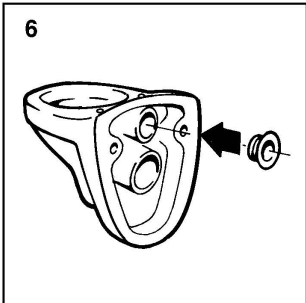

Fit flushend seal provided into w.c. basin.

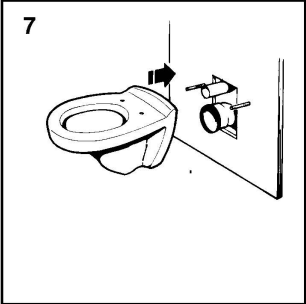

Ensure soil socket seal is in correct position and fit w.c. basin onto studs. Secure basin in position using fixings and instructions supplied with the w.c.


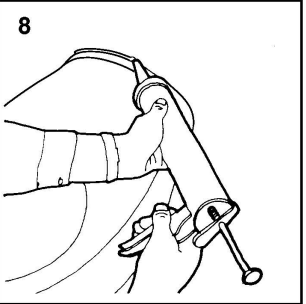


Seal around back and sides of w.c. with silicone building sealant.


FIXING INSTRUCTIONS
WALL HUNG BIDET

***Prior to installation, please establish the correct dimension for your particular WC / Bidet**


Dimension - B 180mm *or 230mm

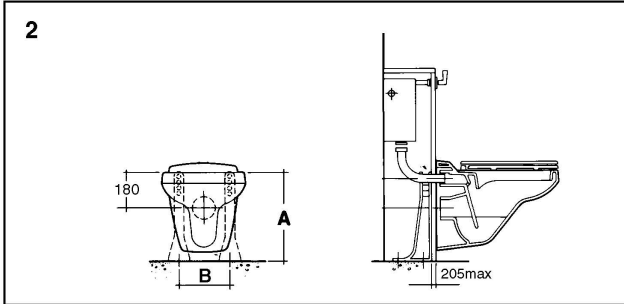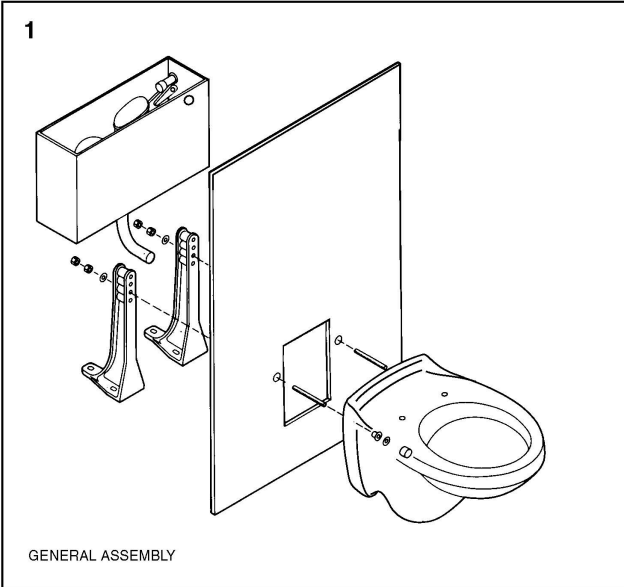


Normal height of w.c. basin (dimension A) is 400mm. Design of floor brackets also allows heights of 375mm, 425mm or 450mm.
Before fixing, ensure soil pipe installation will accommodate the height chosen.
Note *Floor brackets may only be fixed to a solid floor.
*Access to cistern must be built into design of panels.

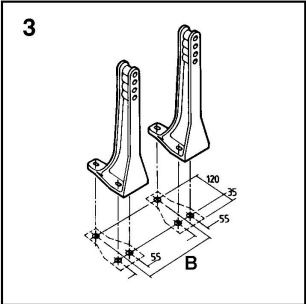


Drill holes for floor brackets as shown. Secure brackets to floor using M12 rawlbolts (not supplied).

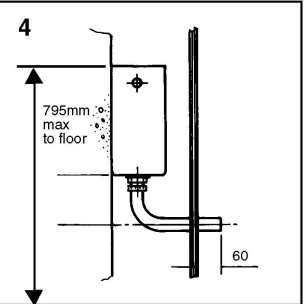


Fix cistern at maximum height shown above. Install cistern as per the instructions provided with the cistern.

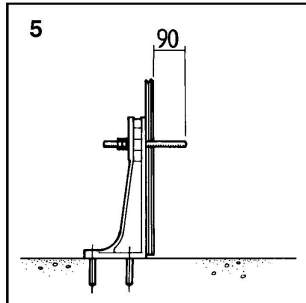


Assemble nuts and washers onto studding so that studding protrudes 90mm from front of panel. Nuts should then be locked tightly together.

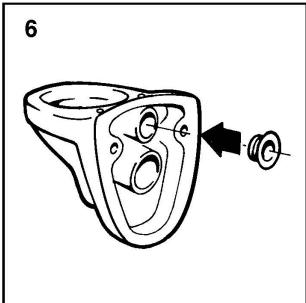

Fit flushend seal provided into w.c. basin.

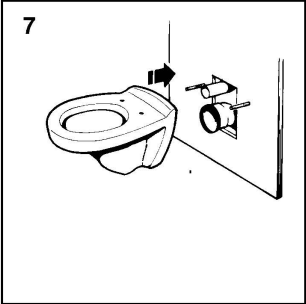

Ensure soil socket seal is in correct position and fit w.c. basin onto studs. Secure basin in position using fixings and instructions supplied with the w.c.

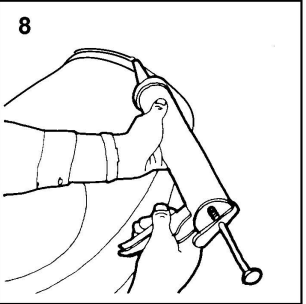

Seal around back and sides of w.c. with silicone building sealant.